


Teaching Station Instructions

12/16/2004

Important phone numbers:

West Campus AV	x1954
Media Retrieval	x1690
Computer issues, call ISCD	x5221

<p>VCR</p> <p>The VCR is inside the cabinet under the desk. Pressing the VCR icon displays all the functions of a typical VCR.</p>	<p>VCR tuner</p> <p>Used to tune in TV stations.</p>	<p>Visualizer</p> <p>The visualizer is on the top of the desk and is used for display of documents or objects.</p>	<p>Teacher Stn.</p> <p>The computer in the teaching station is labeled as Teaching Stn. The keyboard pulls out from under the desk surface. You will need an LCC log on name (TUID) and password to access the network.</p>	<p>Laptop</p> <p>Laptops are hooked into system via the connections inside cabinet under the desk. The connections are labeled LAPTOP for the video and LAPTOP/ PC AUDIO for the audio. You will need a VGA cable for video and an XLR to mini plug for audio.</p>	<p>Ext. Video</p> <p>This is used to see equipment hooked up to the external video or audio source inputs such as a DVD player or video camera.</p>	<p>Media Center</p> <p>Used to display a source from Media Retrieval at the downtown campus.</p>
---	---	---	--	---	--	---

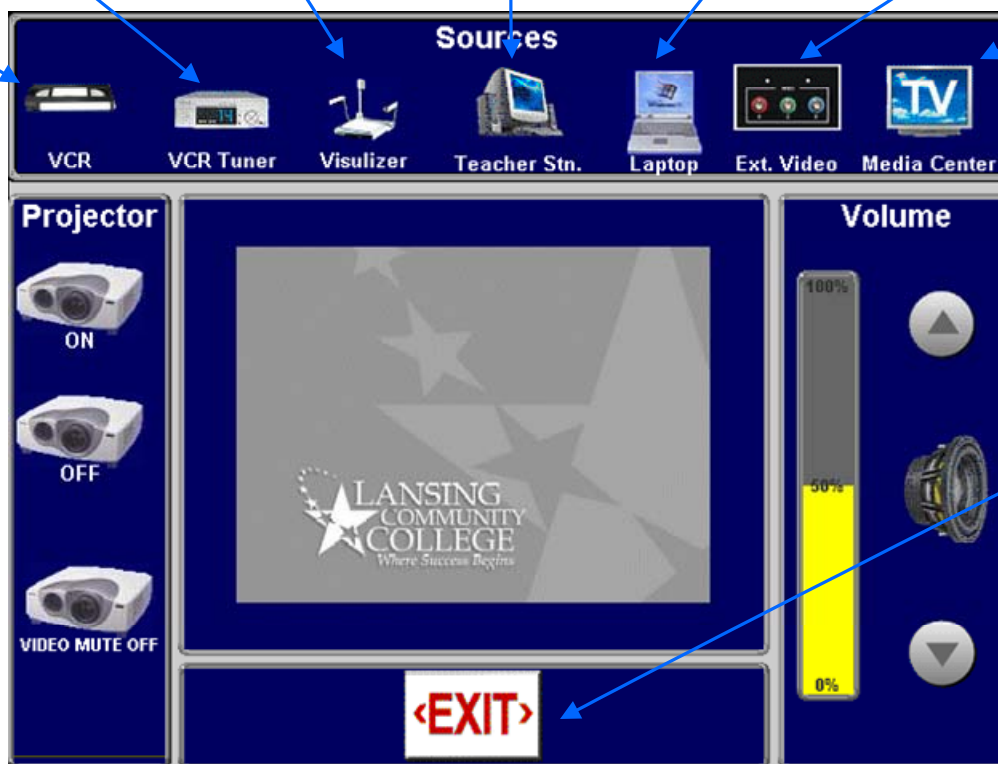

TURNING ON STATION

Touch once to turn the projector on. Icon will turn green. Touch once and wait a second. Multiple attempts may disrupt start up. Please be patient. Soon you should hear the projector fan turn on and an image will slowly appear as the projector warms up.

TURNING OFF STATION

Shutting down the teaching station. Press EXIT at the bottom of the AMX touch panel. A new page comes up. Now press Yes, I am finished. To restart, you'll now have to wait 2 minutes while the projector cools down.

Touch the dark (sleeping) AMX screen twice to access the Main Menu screen